

External Locking Nut



With the Axle installed attach the External locking nut and using a 2.5mm hex key (found on most multi-tools) tighten until secure.

Use our [Axle Guide here](#), to determine if you require this part.