




The following items are required for installation.


Required time 10 minutes

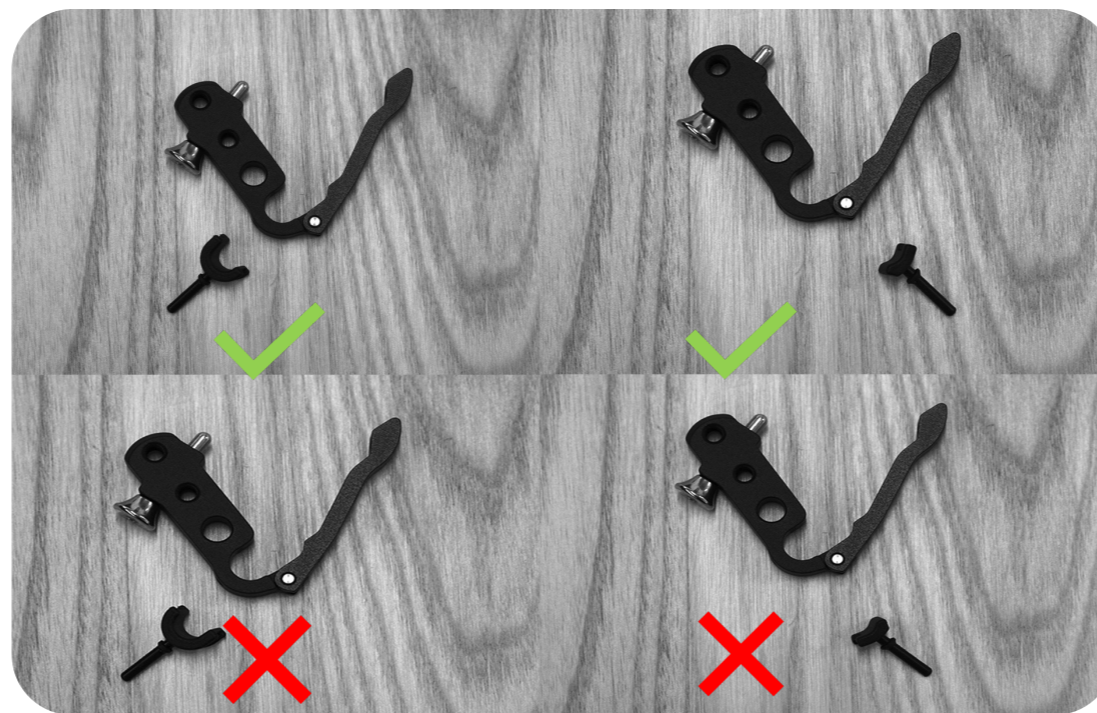

Step One Ensure that you have the bushings orientated in the correct position (*Longer bushing base facing up on both sides*)



Step Two To ensure a secure fitting apply superglue to the base area of the bushing (*avoid applying directly the tab*)

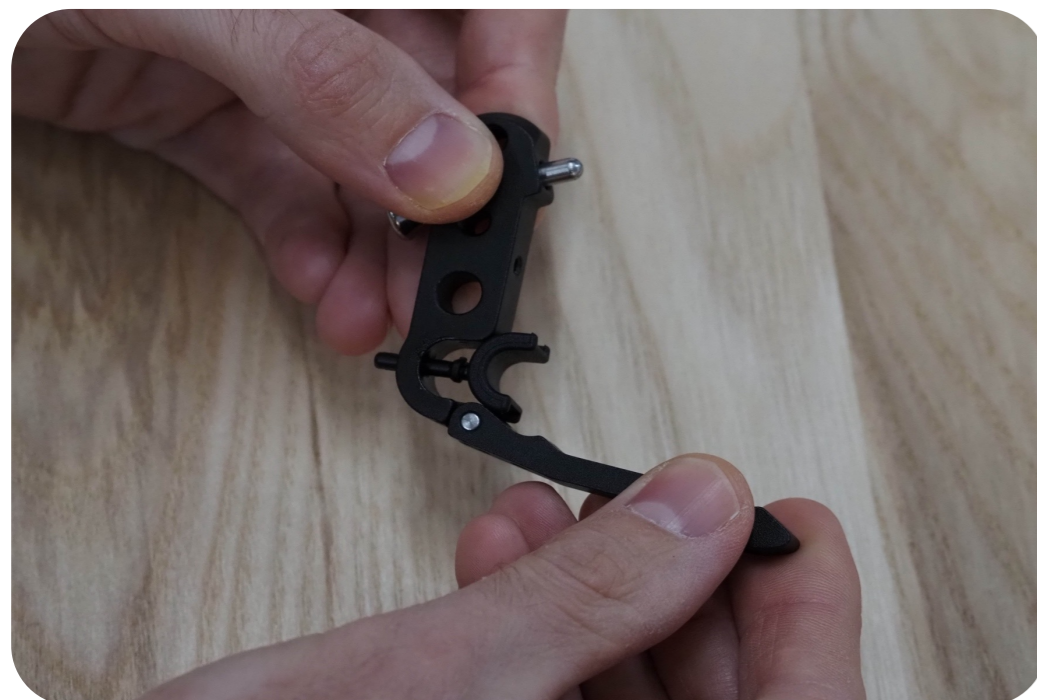

Step Three Insert bushing tab into the dropout (*if having trouble pulling the tab through the dropout apply a drop of water to the tab*)



Step Four Push the bushing into the the dropout and pull on tab (*Apply pressure for a few seconds for the bushing to bond*)



Step Five Remove the excess tab from each side of the bushing (*do not cut below the tab lock*)

Attach Dropouts to axle and leave overnight before use

tailfin