



2x  
18.5cm  
Cargo Strap  
+ Keeper



2x  
30cm  
Cargo Strap  
+ Keeper

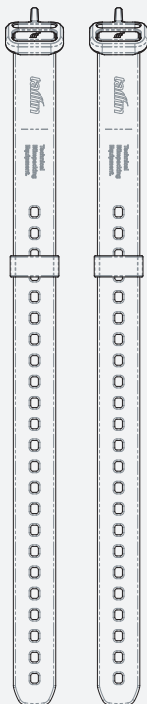

1x  
Compression  
Strap Set  
Left and Right

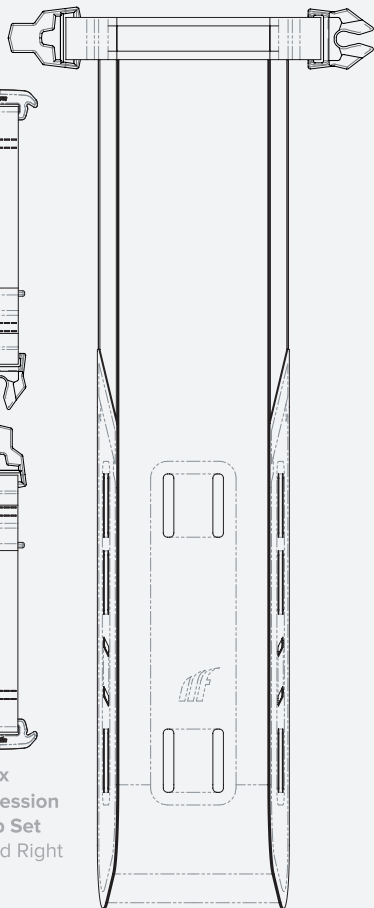

1x  
1.7L Cargo Pack

**tailfin**


**V MOUNT**

**1.7L V Mount Pack**  
Assembly Instructions

## Step One Choose Strap Set-Up


### To fit optional Compression straps:

- (A) Fold webbing over Tailfin T hook\*.



\*How to fold compression strap for easier install.

- (B) Once folded push through horizontal side slots.
- (C) Pull tight to set in position.

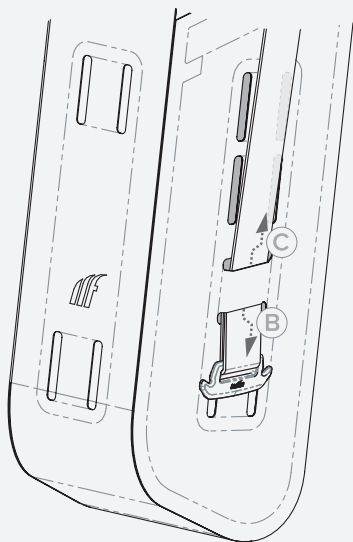

#### Option A

### No Compression Straps


Close bag with single clips at the top of bag for simple, one clip set-up. No Compression Straps needed.




#### Option B

### 2x Side Compression Straps


Fit 2 Compression Straps to horizontal side slots, roll bag and connect clips at side to streamline and compress contents.

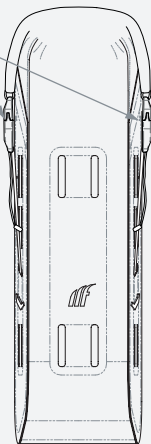


## Step Two Fit Mounting Cargo Straps

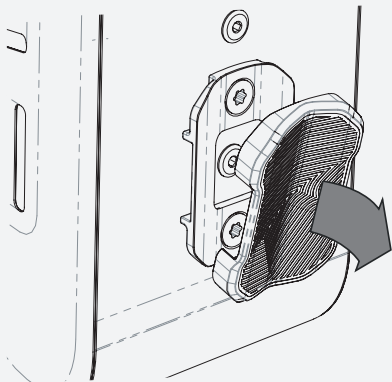


**2A.** Remove V Mount Rubber Gripper by peeling away at a corner.

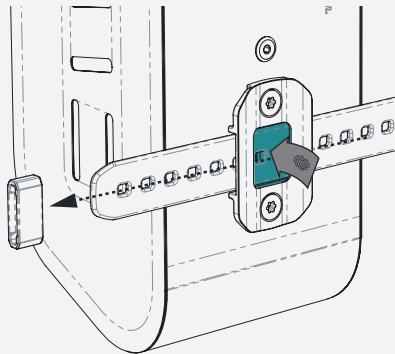

**2B.** Place thumb over green section to guide the strap through metal mounting block. Attention: Check Cargo Strap hook is pointing in correct orientation.

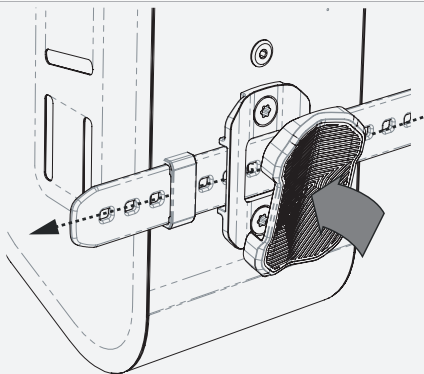

**2C.** Re-attach V Mount Rubber Gripper by hooking corners over metal mounting hardware. Slide on Keeper and position Anywhere Pack on bike.

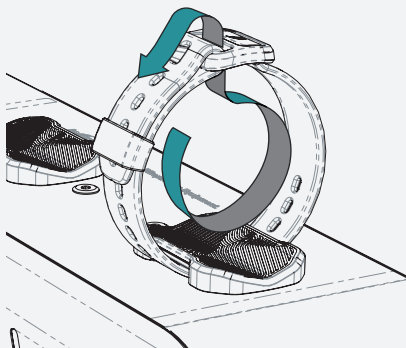

**2D.** To tighten Cargo Strap, thread the strap as shown. Pull tight so hook engages. Place loose end in Keeper.

## Step Three (Optional) **Adjust Height Of V Mounts**

### **To Adjust Mounting Positions (If Required)**

- (A) Remove V Mount Rubber Gripper and all **screws**.**
- (B) Adjust** mounting hardware to desired position.
- (C) Re-attach all screws. Tighten 2.5mm Socket screws until fabric begins to twist** (to keep waterproof). **Tighten Torx T25 mounting screws to 4Nm. Re-apply** thread-locker to prevent screws from becoming loose and tighten.

