


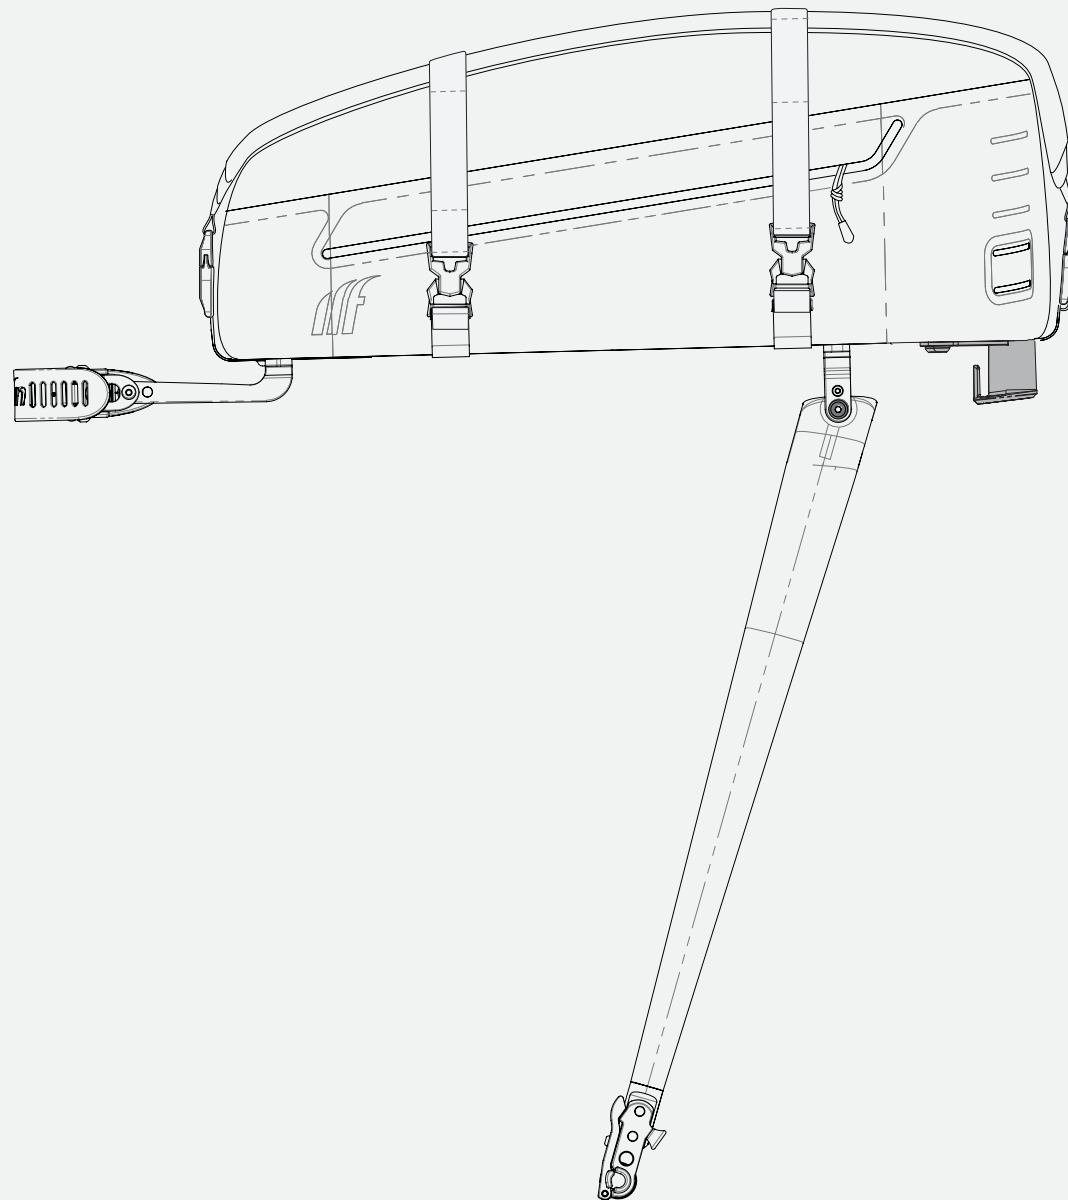

Light Mount (Seat Post Mimic)

Assembly Instructions



www.tailfin.cc
support@tailfin.cc
for further assistance



Light Mount (Seat Post Mimic)

What's included

- A** Light Mount
- B** 2 x M5 x 10mm Screws
- C** 2 x M5 Washer

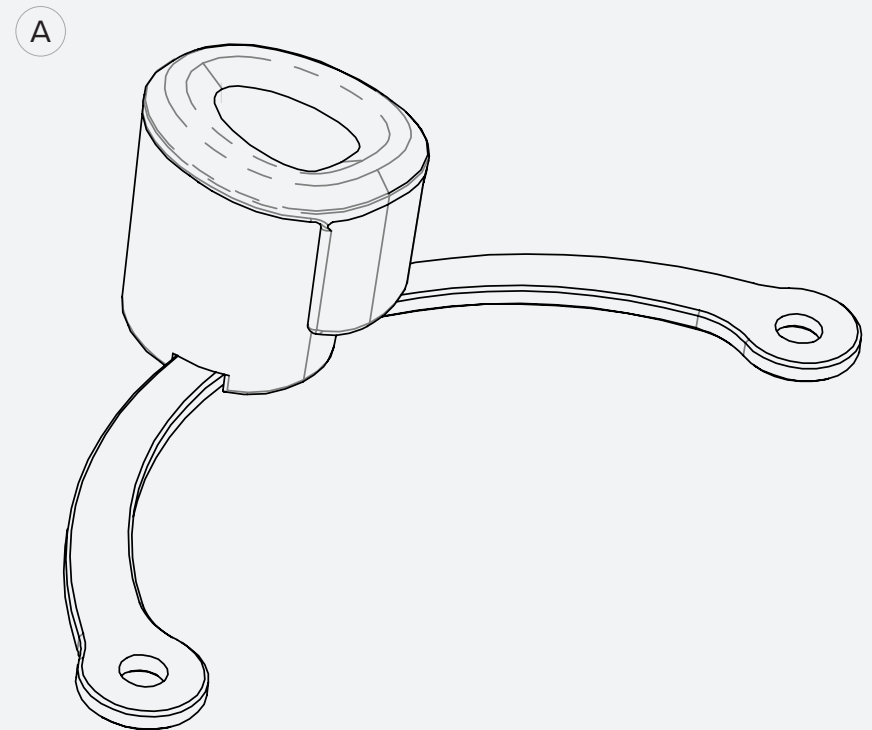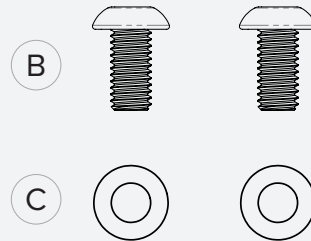

Tools Required - 2.5mm Hex Key

-T25 Torx Screwdriver




Time - 5 minutes

Remove Existing Screws

Step One


- A Using T25 Torx screwdriver, remove two existing outer screws and washers from underside of AeroPack or AP20 Trunk Top Bag

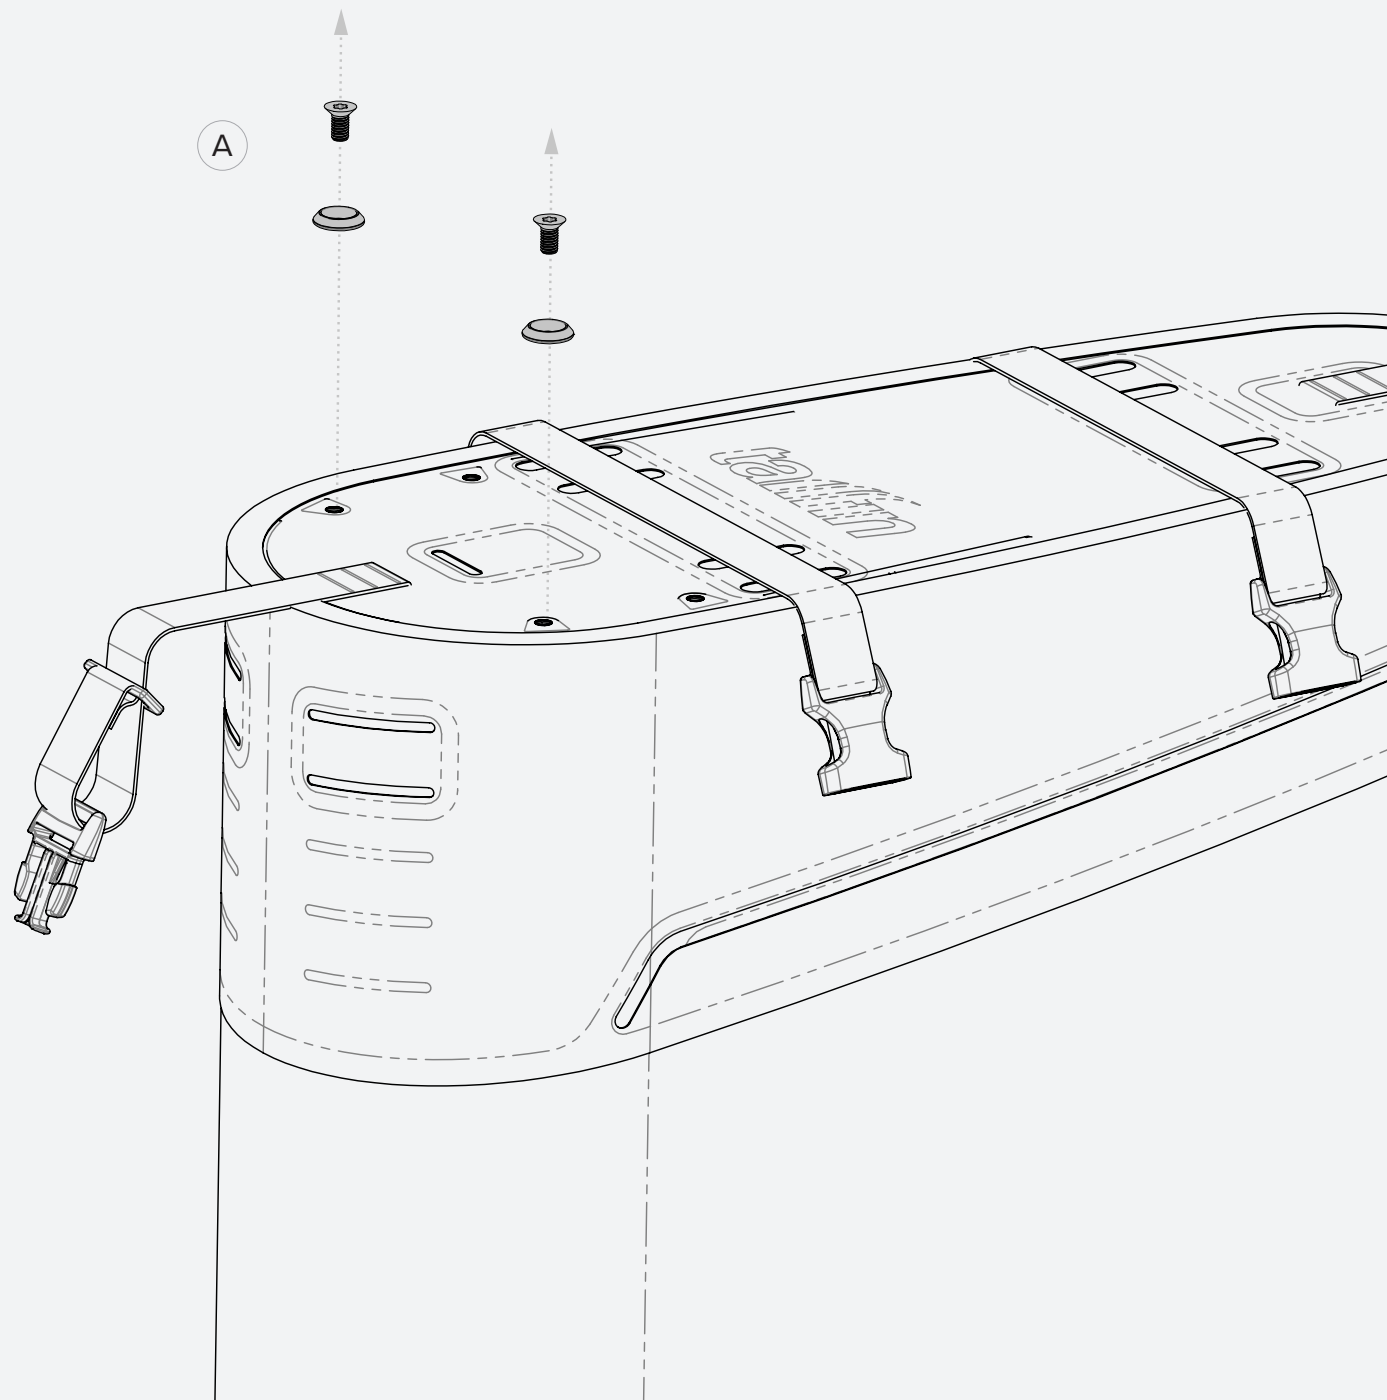

Attach Light Mount

Step Two

- A Align Light Mount, and with a 2.5mm Hex Key attach using M5 x 10mm screws and washers. Tighten to 5Nm

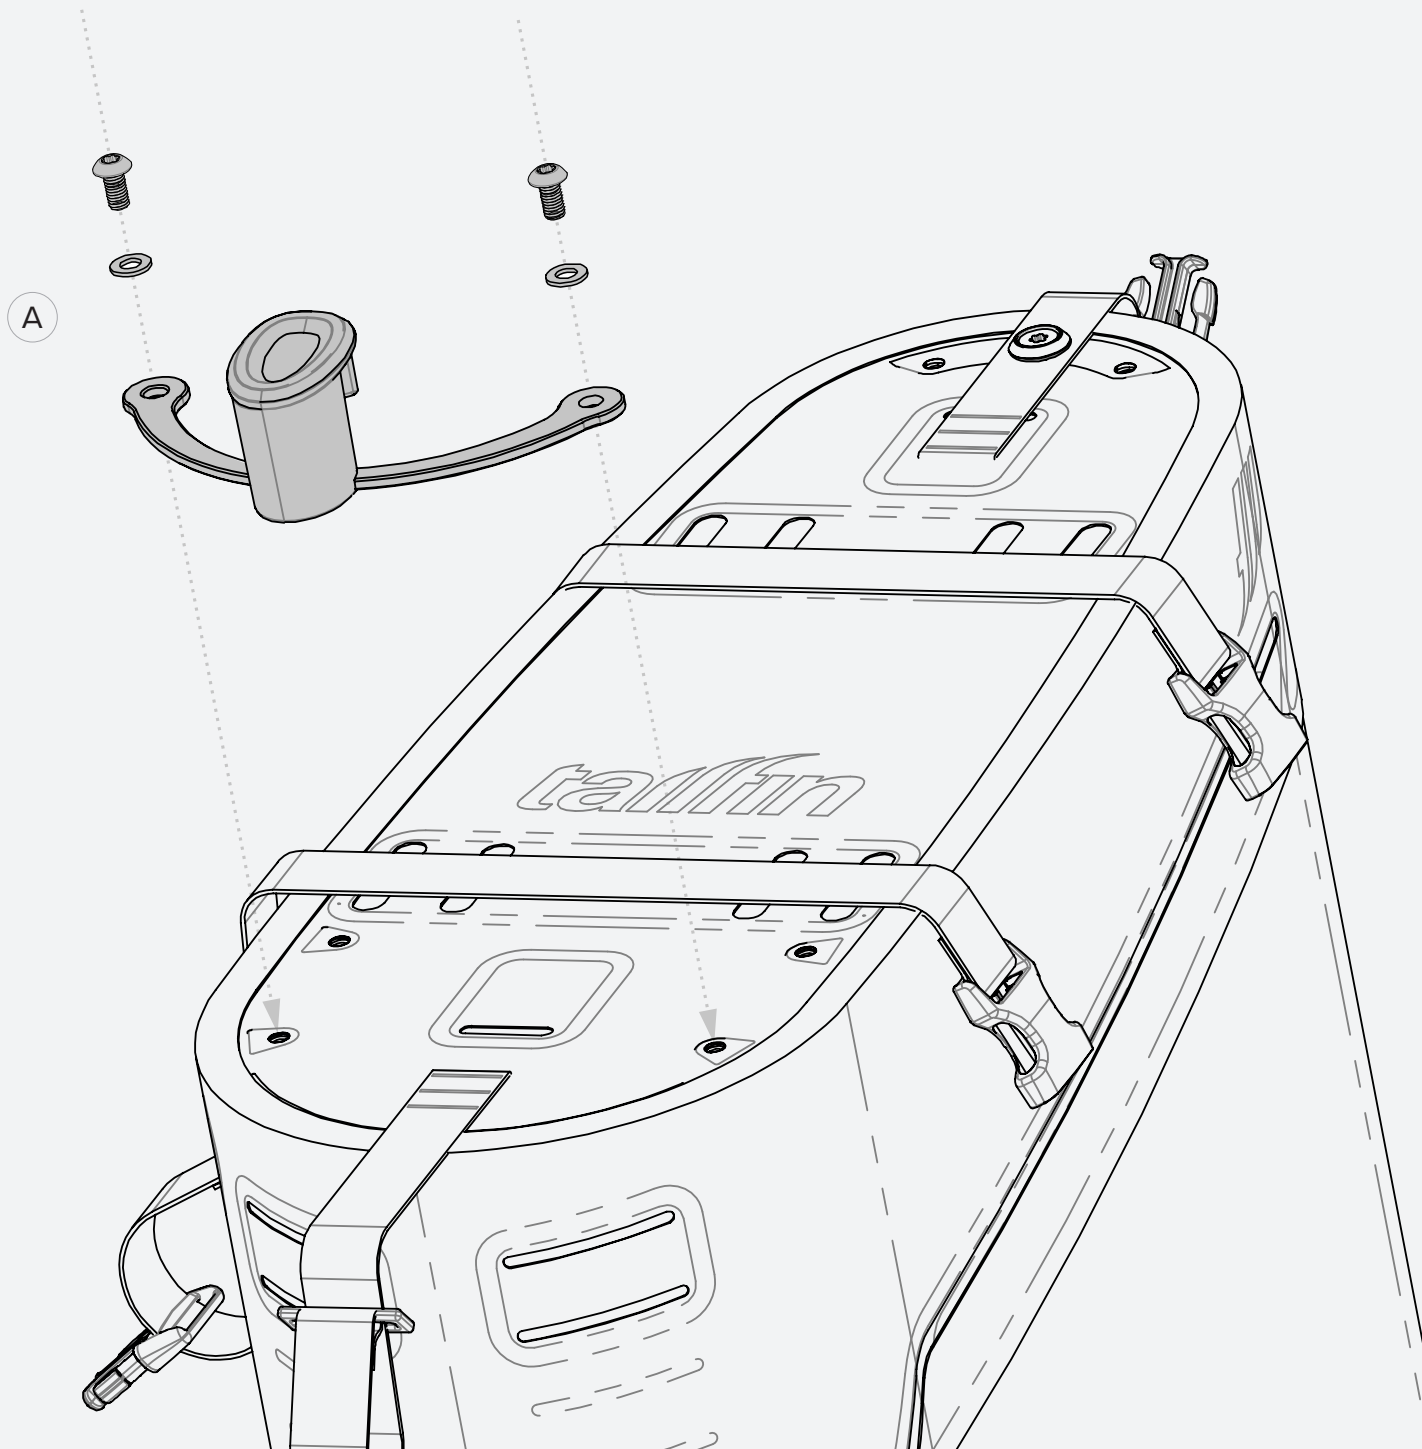



Light Mount (Seat Post Mimic)
Assembly Instructions

www.tailfin.cc
support@tailfin.cc
for further assistance