


tailfin

Fork Pack

Assembly Instructions


Step One Fit Clamp & Lower Hook

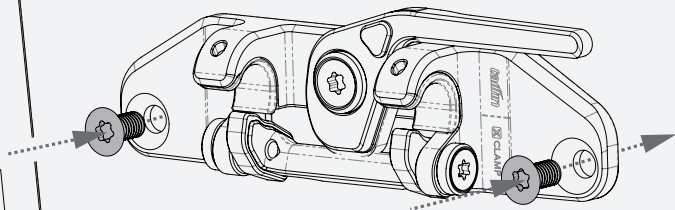

2x M5x10mm

Torx T25 - Tighten to 5Nm

Assembled position shown in Step Four.

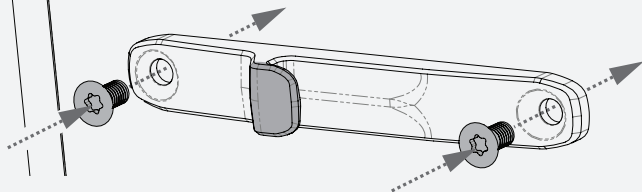

2x M5x10mm

Torx T25 - Tighten to 2Nm

Point hook against direction of travel


e.g. Right hand side of fork point hook right.

Step Two Choose Strap Setup

To fit optional Compression straps:

Fold webbing over Tailfin T Hook. Push T Hook through either horizontal or vertical side slots.

Pull back to set in position.

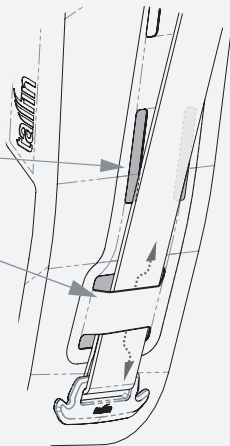

A No Compression Straps


Close bag with single clips at the top of bag for simple, one-clip setup. No Compression Straps needed.

B Side Compression Straps


Fit Compression Straps to horizontal side slots, roll bag and connect clips at side to streamline and compress contents.

C Front Compression Straps

Fit Compression Straps to vertical side slots to carry additional items on front of bag or compress contents. Close bag with single clips at top of bag.

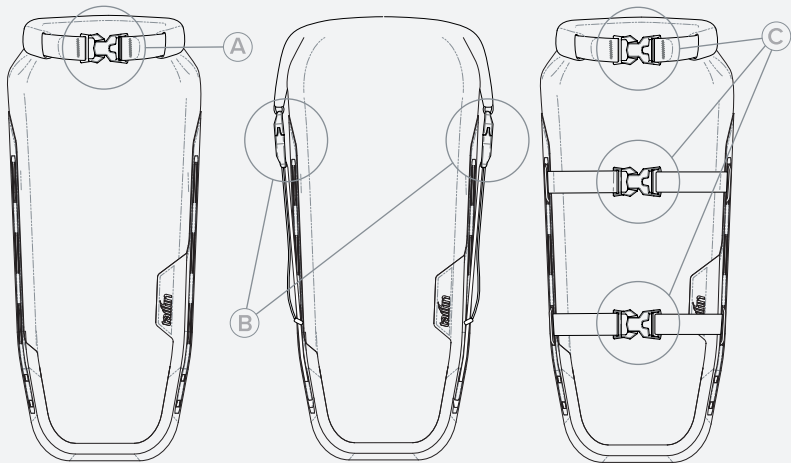


Step Three **Attach Mount**

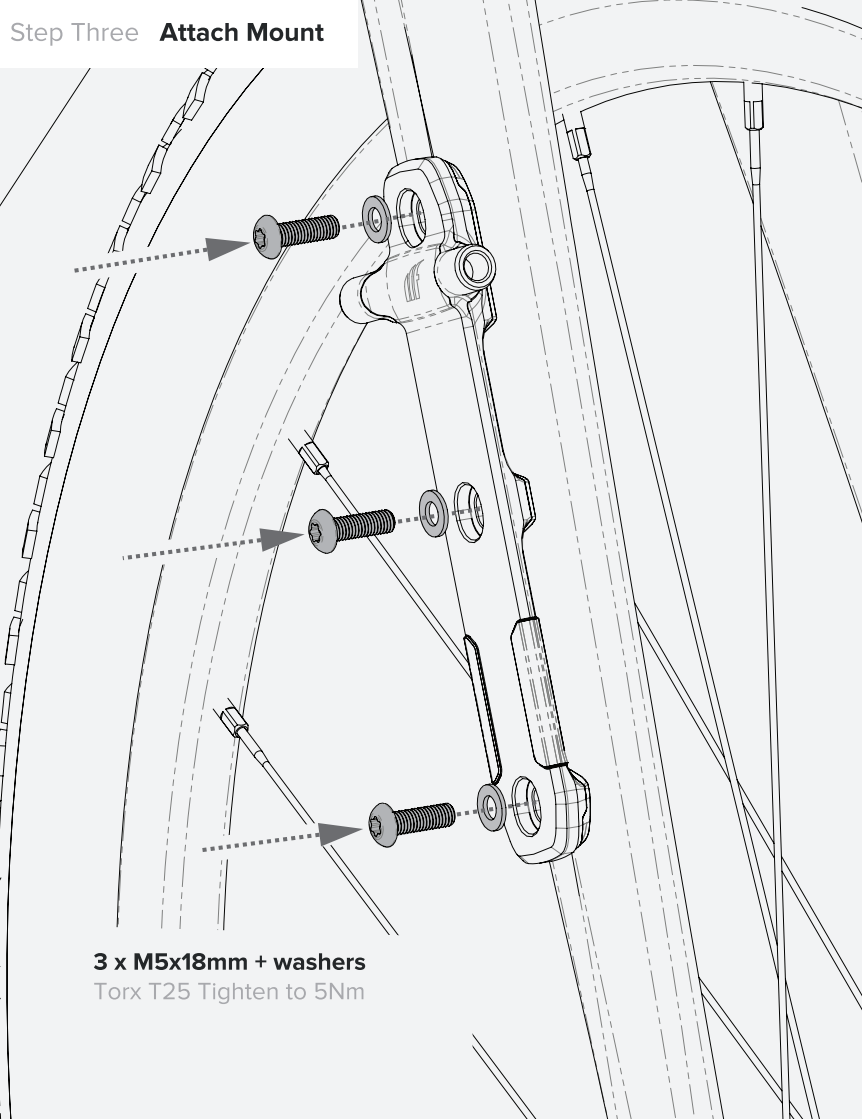

3 x M5x18mm + washers


Torx T25 Tighten to 5Nm

Step Four **Attach Pack to Fork**

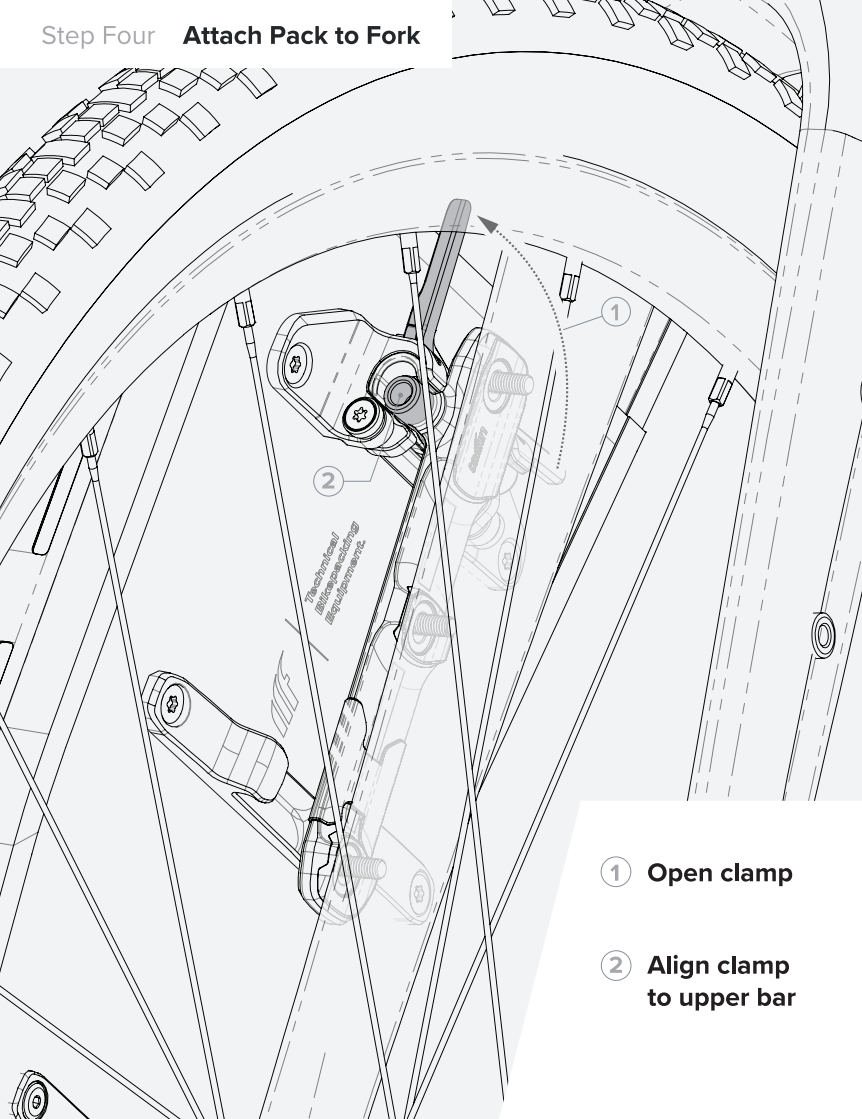

① **Open clamp**

② **Align clamp
to upper bar**

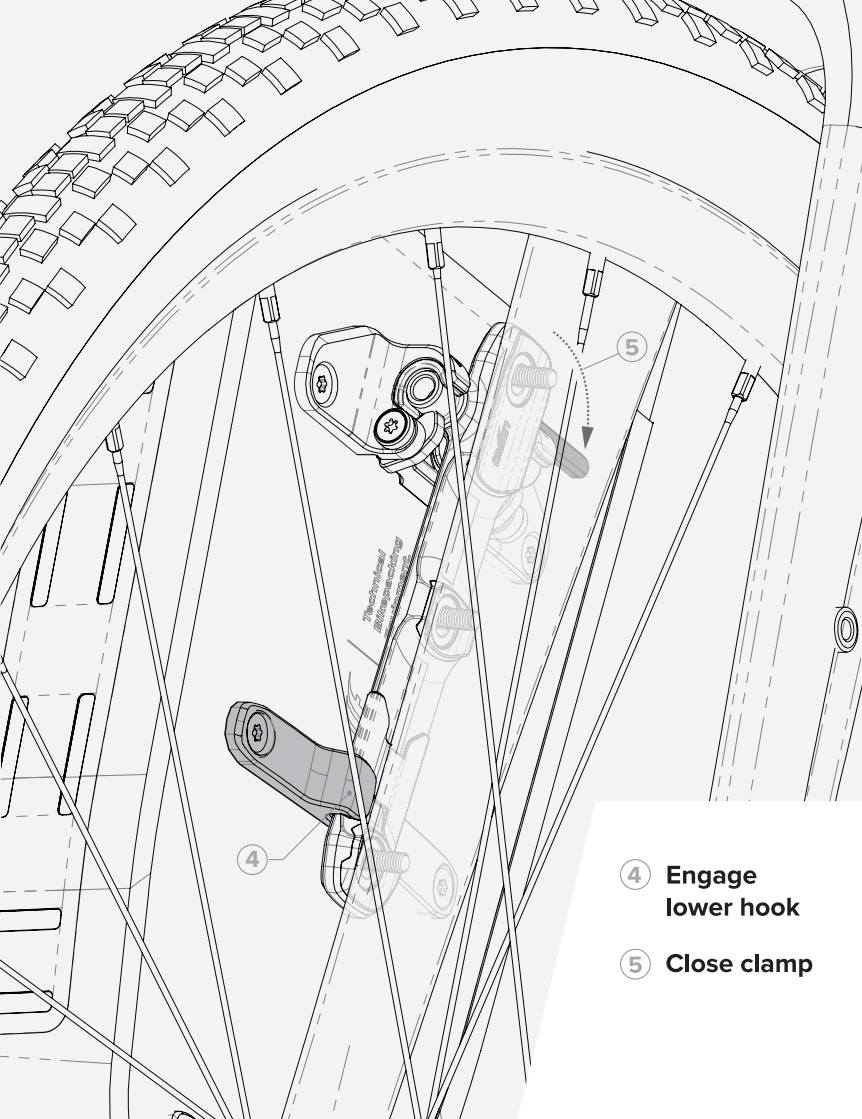

- ④ Engage lower hook
- ⑤ Close clamp