


Step One Remove existing Axle and UDH Bolt



- A** Remove your existing thru axle from your bike.
- B** Undo and remove the drive side UDH Bolt (reverse thread) and UDH Frame Washer. You will need to re-use the UDH Frame Washer for compatible frames. The UDH Bolt is no longer needed.
- C** Leave UDH Hanger installed in bike.

Step Two Install Tailfin Axle & Tailfin UDH Adapter

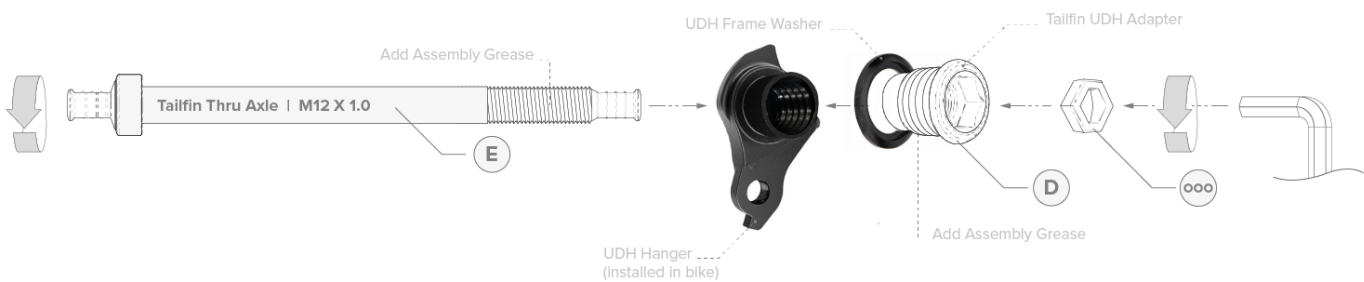

- D** Grease and Install Tailfin UDH Adapter and UDH Frame Washer (Frame Washer for all compatible frames). Tighten to 25Nm.
- E** Install Tailfin M12 x 1.0 Thru Axle. Use appropriate spacers to centre Tailfin Arch over rear wheel. Tighten to 10Nm.
- ooo** Optional. Use 12mm to 8mm hex key converter. Keep with your multi tool out on your rides.