
- Bag
- **Arch**
- Front Connector
- (**D**) M5x12MM Countersunk Screw
- (E) **Arch Mount**
- (F) **Short Seatpost Strap**
- (G) **Long Seatpost Strap**
- \bigcirc **Seatpost Connector**
- (L) **Seatpost Connector Fixings**
- 90_{MM} Front Link
- 60_{MM} Front Link
- M 30_{MM} Front Link
- N M6x14MM Socket Head Countersunk Screw
- 0 M4x5MM Button Head Screw
- P Washers
- **Q Fast Release Dropout Kit***
- R Thru Axle*
- Mini Cage*
- Straps*
- Seat Post Mimic*
- Water Bottle*
- (000) **Optional Step**

Product Assembly Guide

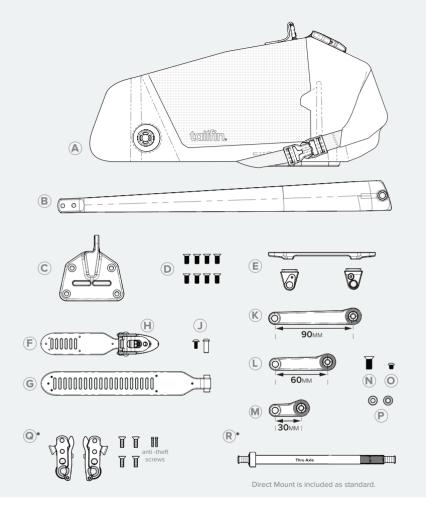











SpeedPack System Assembly Instructions 1+2+3+4

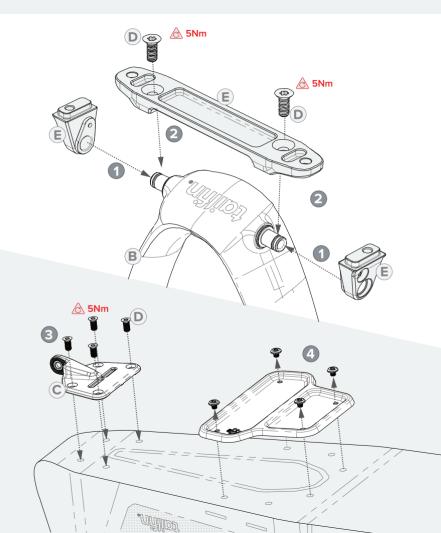

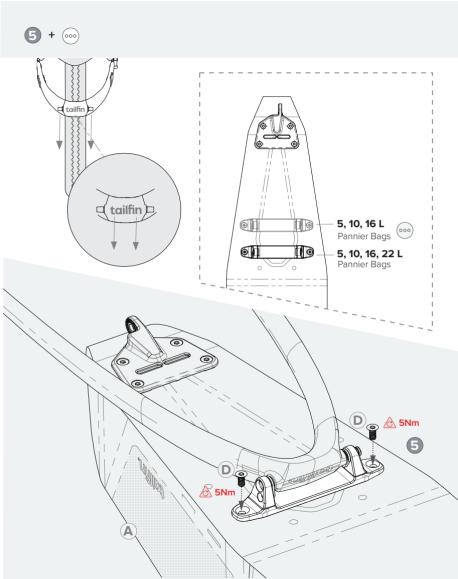


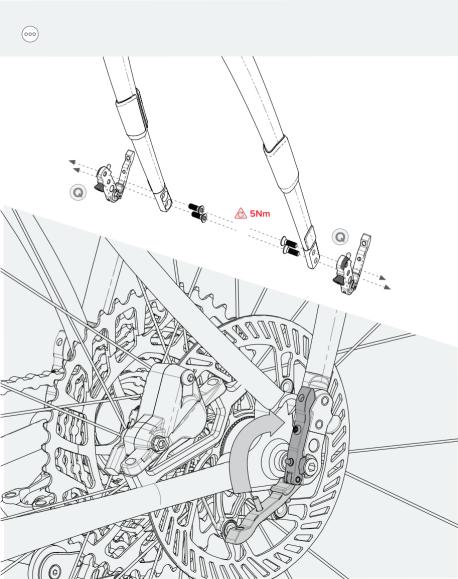


6 + 7 + 8 + 9

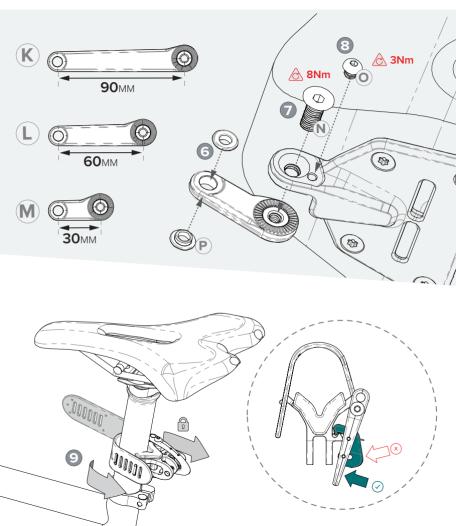




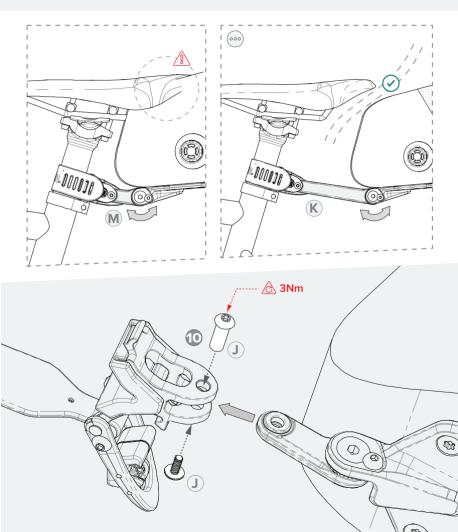



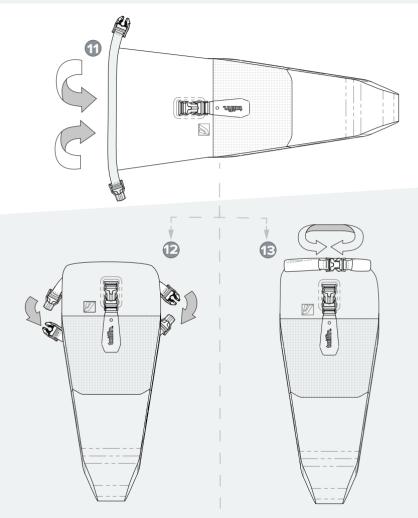

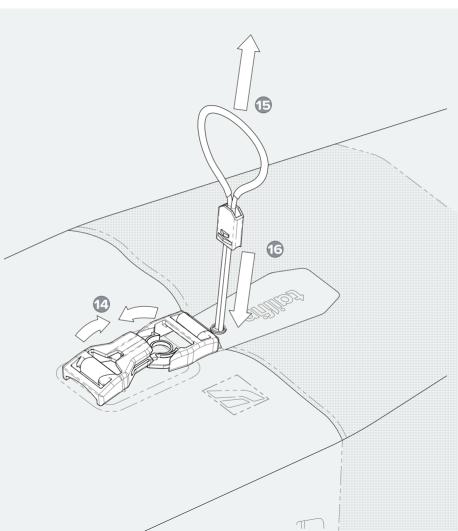

••• Accessories

