



tailfin.

22L Panniers + Compression Straps
 Assembly Instructions



1

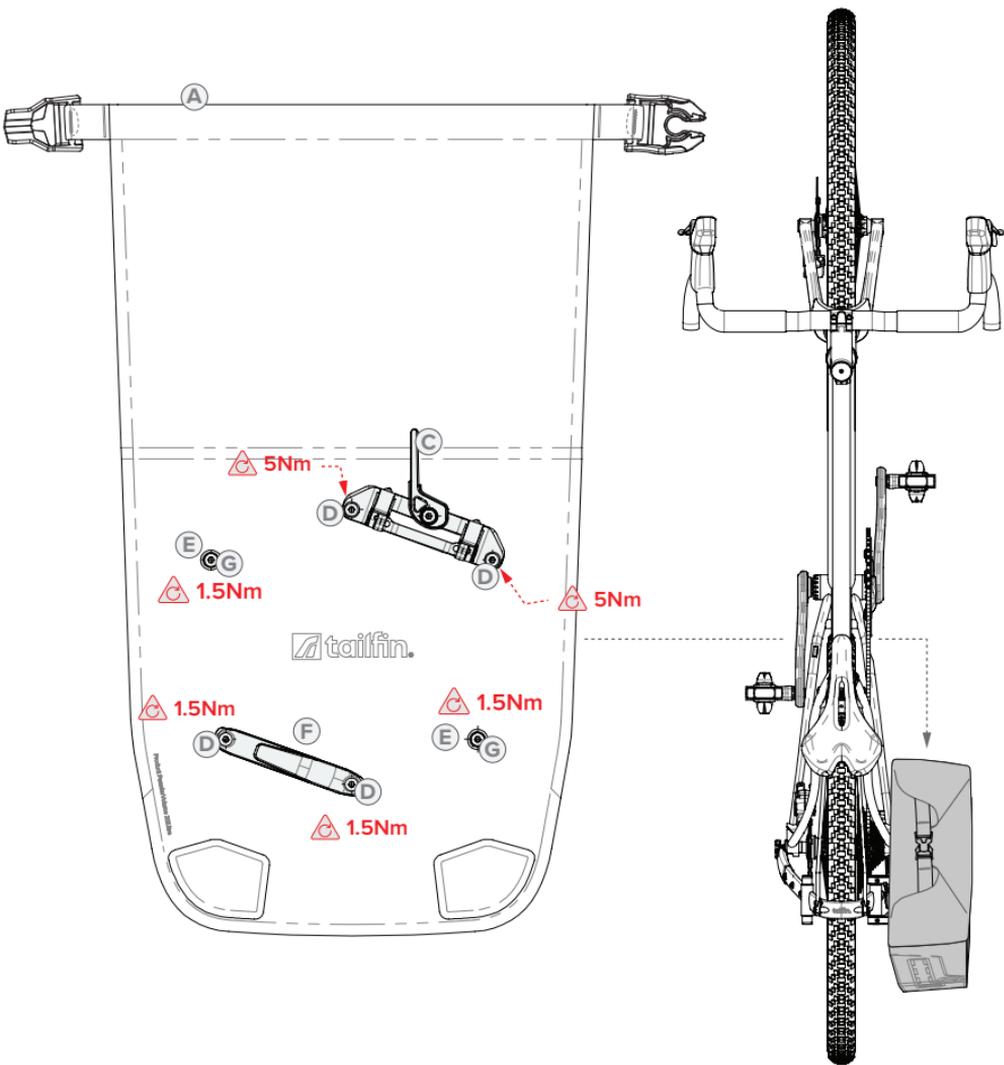

2 + 3 + 4 + 5 + ○○○

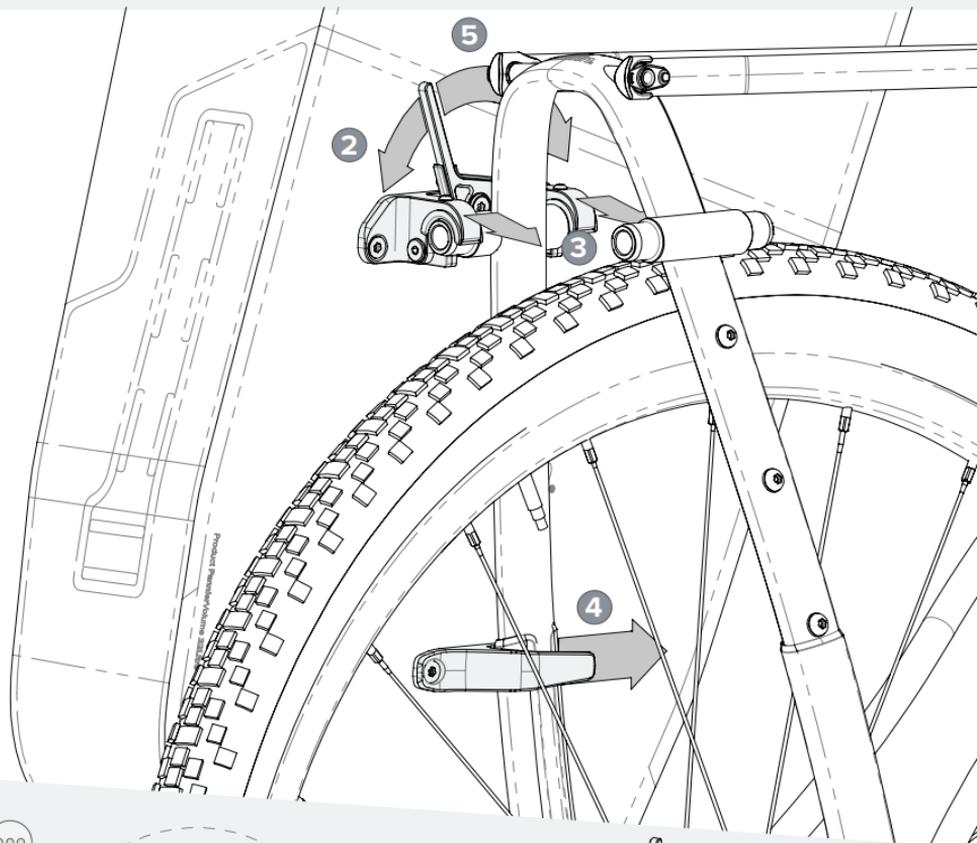

○○○

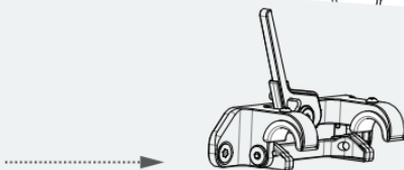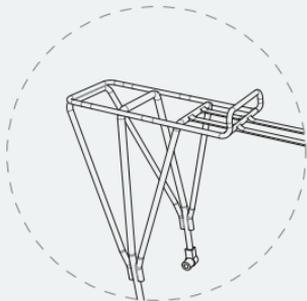

+

(H)



8mm dia






10mm dia



12mm dia

6 + ○○○ + 7 / 8 / 9

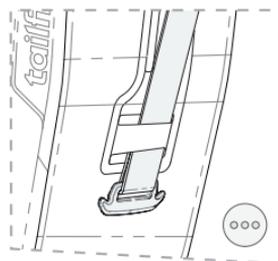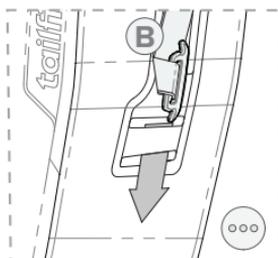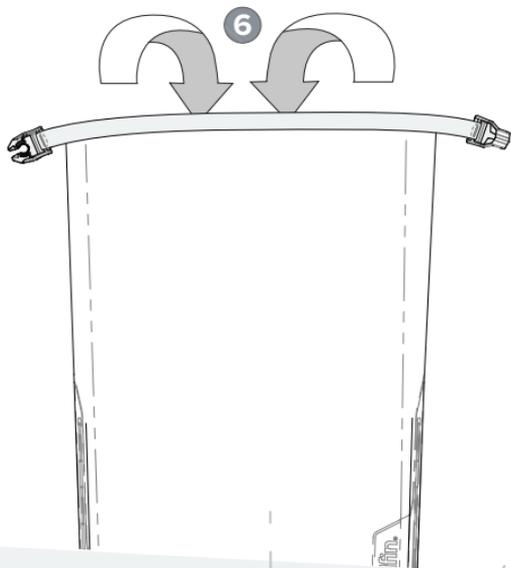

7



8



9



- (A) Bag**
- (B) T Hook Straps**
- (C) X Clamp**
- (D) M5x12^{MM} Countersunk Screw**
- (E) M5 Countersunk Washers**
- (F) Lower Hook**
- (G) M5x8^{MM} Countersunk Screw**
- (H) Third Party Rack Inserts**
- (ooo) Optional Step**

Product Assembly Guide

