


## Step Three Attach to rack

- 1 Open clamp
- 2 Align lower hook
- 3 Fit to rack mounts
- 4 Close clamp

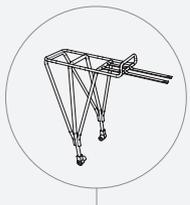




For other racks use:

**RS** **Rack Spacers**



8mm, 10mm, 12mm dia.

Change spacer to match rack tubing diameter. Rotate lower hook for best engagement.

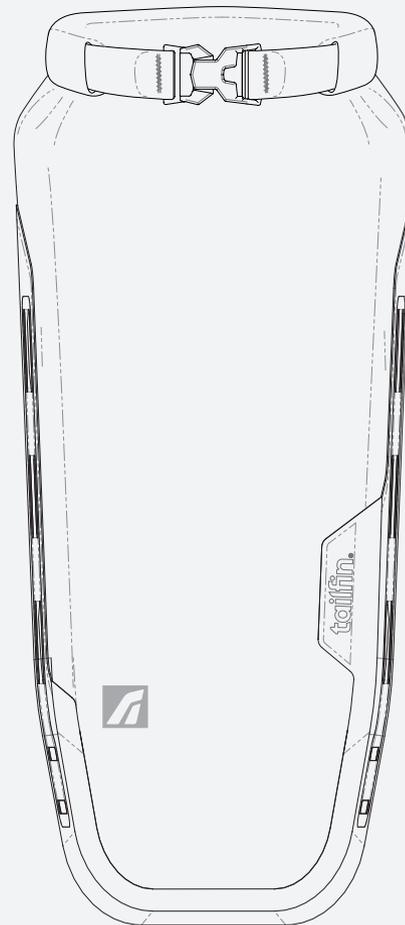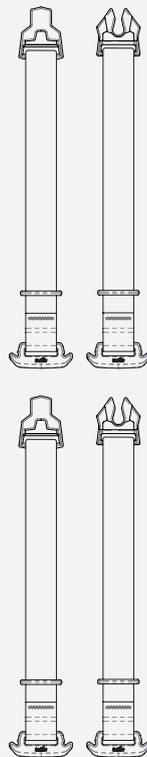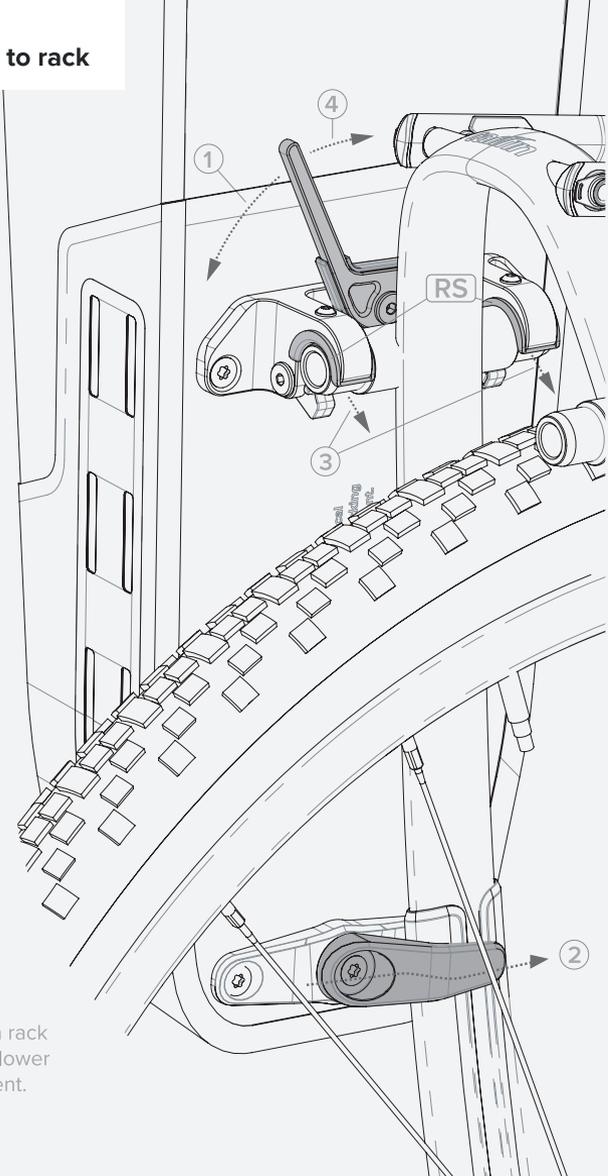

**tailfin.**<sup>®</sup>

**Mini Panniers + Compression Straps**  
Assembly Instructions

## Step One Choose Strap Set-Up

### To fit optional Compression straps:

Fold webbing over Tailfin T hook. Push T Hook through either **horizontal** or **vertical** side slots.

Pull back to set in position.

#### A No Compression Straps



Close bag with single clips at the top of bag for simple, one clip set-up. No Compression Straps needed.

#### B Side Compression Straps


Fit Compression Straps to **horizontal** side slots, roll bag and connect clips at side to streamline and compress contents.

#### C Front Compression Straps

Fit Compression Straps to **vertical** side slots to carry additional items on front of bag or compress contents. Close bag with single clips at top of bag.

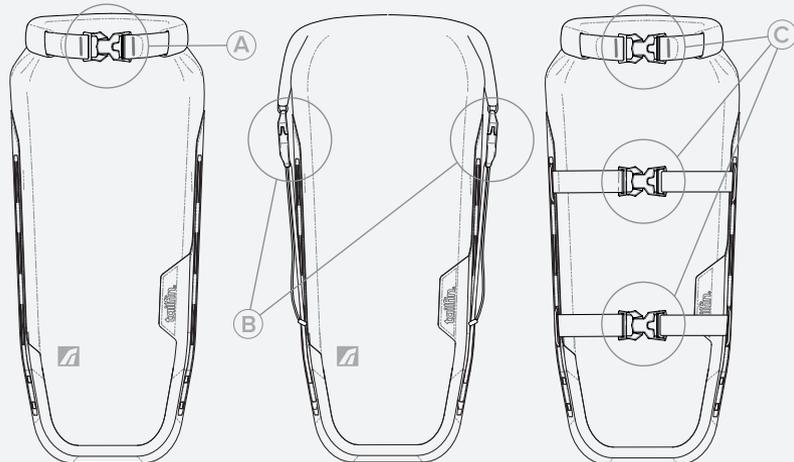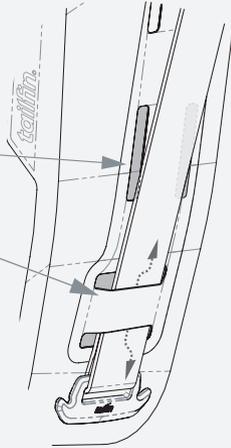


## Step Two Fit Clamp & Lower Hook

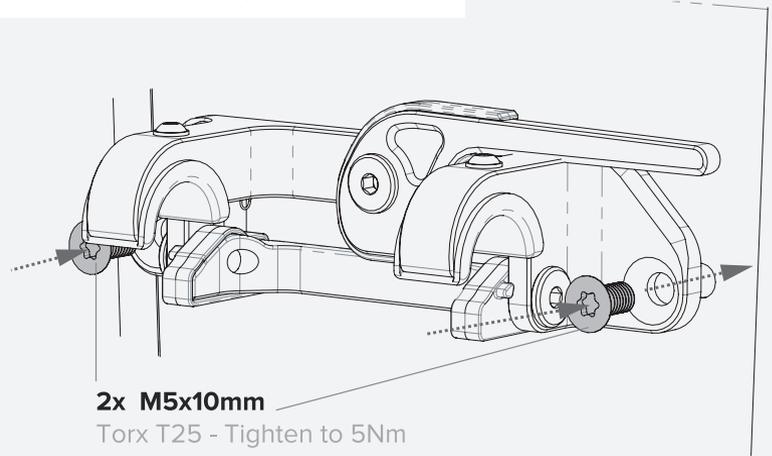

**2x M5x10mm**

Torx T25 - Tighten to 5Nm

Assembled position shown in step three.

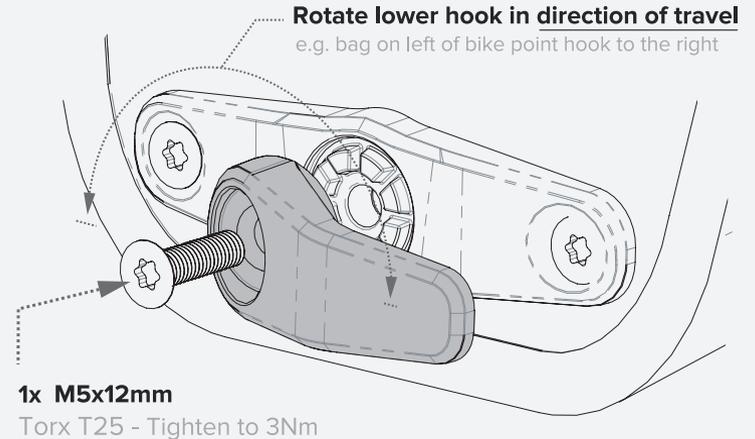

**Rotate lower hook in direction of travel**

e.g. bag on left of bike point hook to the right

**1x M5x12mm**

Torx T25 - Tighten to 3Nm