



tailfin.

16L Panniers + Compression Straps
Assembly Instructions


1

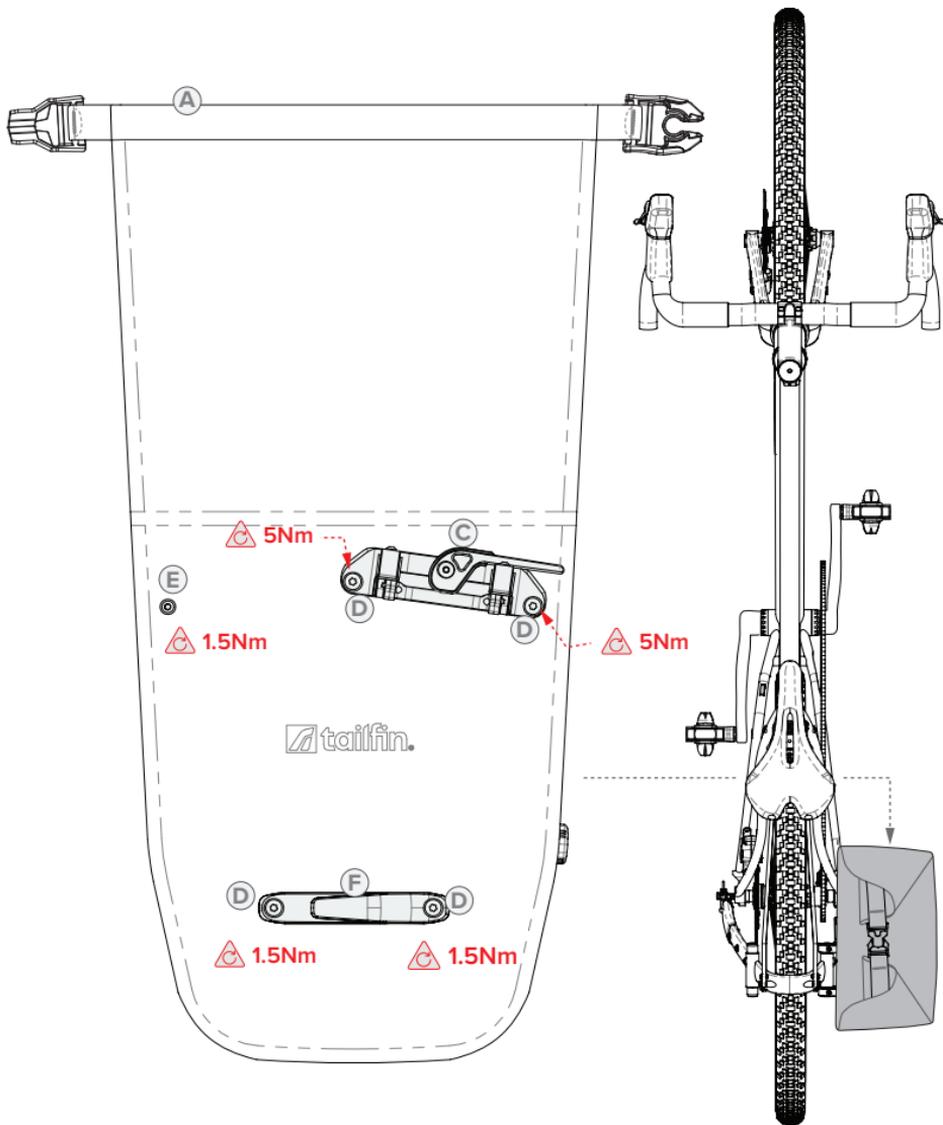



1

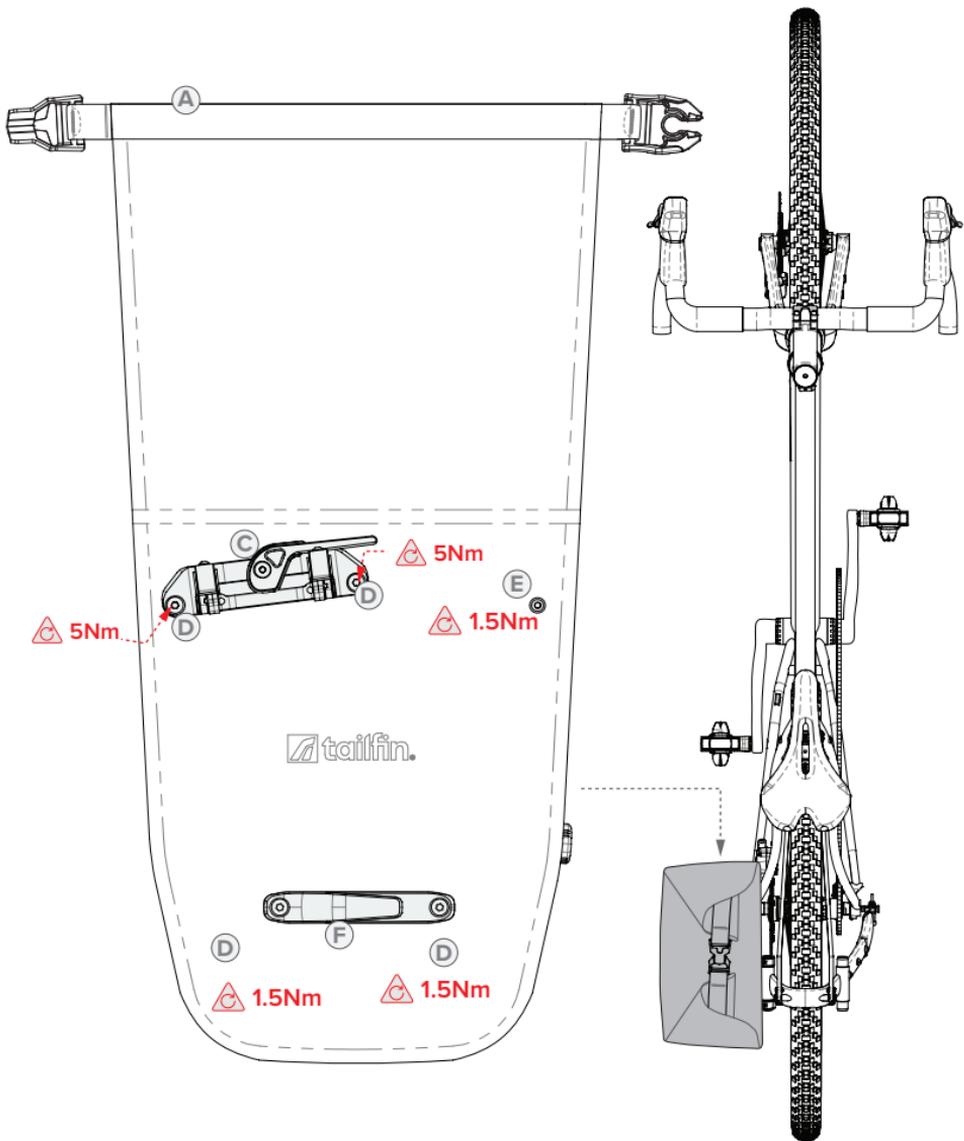

2 + 3 + 4 + 5 + ○○○

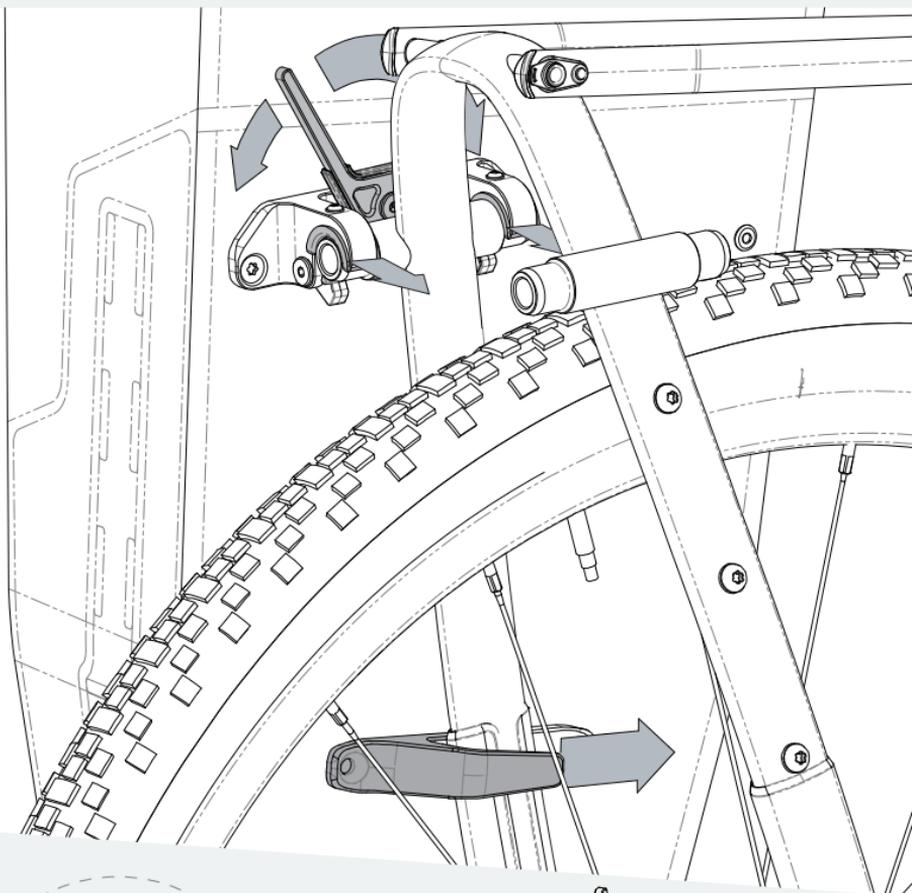

○○○

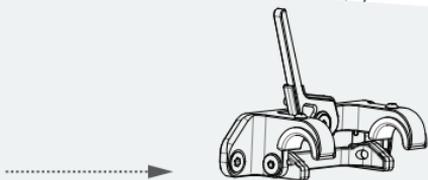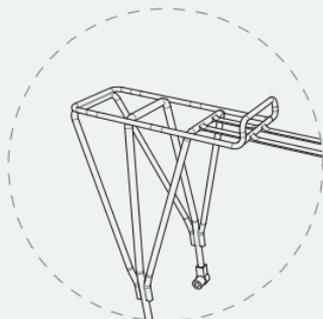

+

G



8mm dia






10mm dia



12mm dia


6 + ○○○ + 7 / 8 / 9

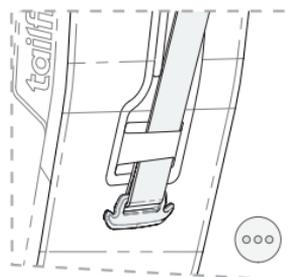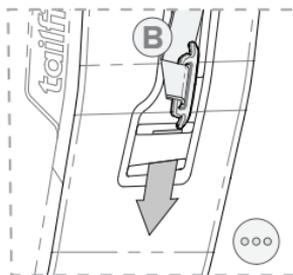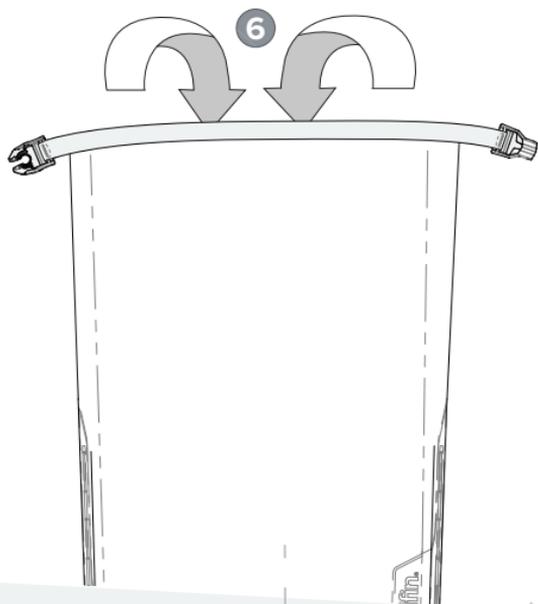

7



8

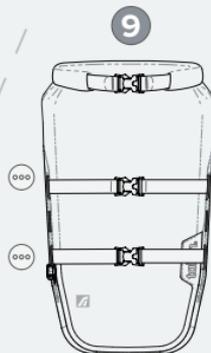

9



- (A) Bag**
- (B) T Hook Straps**
- (C) X Clamp**
- (D) M5x12MM Countersunk Screw**
- (E) Hex 2.5MM Cap Screw**
- (F) Lower Hook**
- (G) Third Party Rack Inserts**
- Optional Step**

Product Assembly Guide

